

Table of Contents	Page
I. Introduction	2
II. Contacting Technical Support	3
III. Connecting the Actiontec USB Wireless Adapter	4
IV. Installing the Actiontec USB Wireless Adapter	5
Configuring Windows 98 SE	5
Configuring Windows ME	8
Configuring Windows 2000	10
V. Configuring the Actiontec USB Wireless Adapter	14
VI. Configuring the AdHoc Feature	16
VII. Configuring File and Print Sharing	17

Proprietary Notice and Disclaimer

Unless otherwise noted, this document and the information herein disclosed are proprietary to Actiontec Electronics, Inc the manufacturer. Any person or entity to whom this document is furnished or who otherwise has possession thereof, by acceptance agrees that it will not be copied or reproduced in whole or in part, nor used in any manner except to meet the purposes for which it was delivered.

The information in this document is subject to change without notice and should not be construed as a commitment by Actiontec the manufacturer. Although Actiontec the manufacturer will make every effort to inform users of substantive errors, Actiontec the manufacturer disclaims all liability for any loss or damage resulting from the use of this document or any hardware or software described herein, including without limitation contingent, special or incidental liability.

Note: PC is a trademark of IBM Corporation. Windows 98 and 98 SE is a trademark of Microsoft Inc. All other brand or product names and logos used in this manual are trademarks or registered trademarks of their respective holders.

0530-0262-000

Table of Contents

1

I Introduction

Thank you for purchasing the *Actiontec* USB Wireless Adapter. This USB Wireless Adapter is easy to use and easy to setup. If you are tired off all those messy wires just to connect a laptop to your Home network, then take your networking to the next level with the *Actiontec* USB Wireless Adapter. You will be able to share files, printers and even your High-Speed Internet access, all without wires.

Package Contents

Make sure the following items came in this package:

- USB Wireless Adapter
- USB Cable
- *Actiontec* USB Wireless Adapter Installation CD-ROM
- This User's Manual and Quick Start Installation Guide

Minimum System Requirements

- One Pentium class computer, 200 Mhz or higher (preferably 300 Mhz or above)
- Microsoft Windows 98 Second Edition (SE), Microsoft ME, Microsoft 2000 installed

II Contacting Technical Support

Actiontec Electronics prides itself on making high-quality, durable, high-performance products. If you should need assistance, the *Actiontec* Technical Support Department is available 6 am to 11pm Mon - Sun (Central Time), to provide professional support.



Actiontec Electronics, Inc.
760 N. Mary Avenue
Sunnyvale, CA 94085

Phone: 1-719-884-8300 E-mail: techsupp@actiontec.com

Connecting the Actiontec USB Wireless Adapter

1. It will not affect the installation process if your computer is on or off. However, if your computer is off then after you have connected the USB Wireless Adapter, please be sure to turn on your computer.
2. Insert the *Actiontec* USB Wireless Adapter into the appropriate USB slot on either the front or the back of your PC.

Installing the Actiontec USB Wireless Adapter

For Windows 98

1. After you have installed the USB Wireless Adapter your computer will display an "Add New Hardware Wizard" screen. Click Next.



2. In the next screen, select the option Search for the best driver for your device and then click the Next button.




3. Please insert the *Actiontec USB Wireless Adapter* Installation CD into your CD-ROM drive. Select CD-ROM Drive and then click Next.




4. Your computer will locate the correct drivers named "AEIWLNIC.inf". Click Next to install the drivers.




5. The USB Adapter's properties screen will appear. (Note: The "SSID" must be the same as the "ESSID" on your Home Gateway or Access Point.) Click OK to complete the installation process.

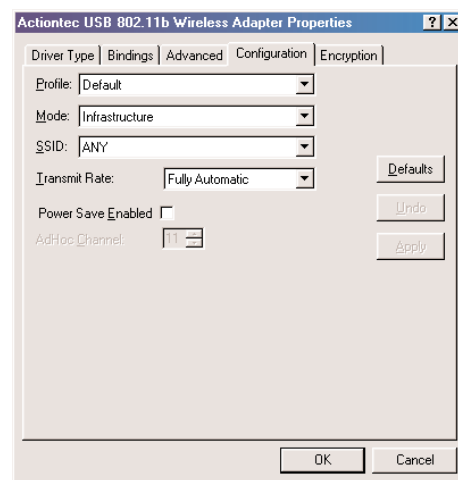

6. The installation is now complete. Please click Finish .

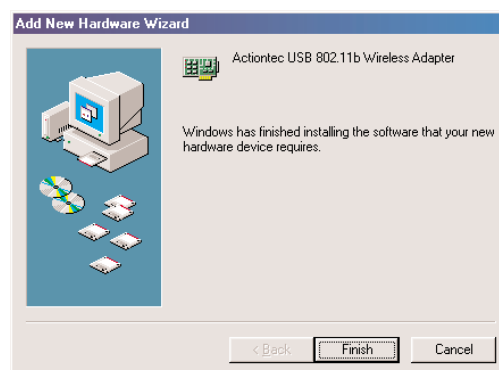

7. It will be necessary for you to shut down your computer. Please click OK to restart your computer. If this screen does not appear please restart your computer manually.

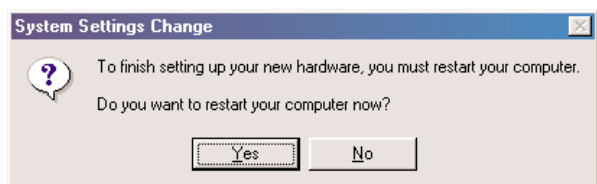


Windows ME

1. After you have installed the USB Wireless Adapter your computer will display an "Add New Hardware Wizard" screen. Click Automatic search for a better driver (Recommended). Then click the Next button.




2. The USB Adapter's properties screen will appear. (Note: The "SSID" must be the same as the "ESSID" on your Home Gateway or Access Point.) Click OK to complete the installation process.

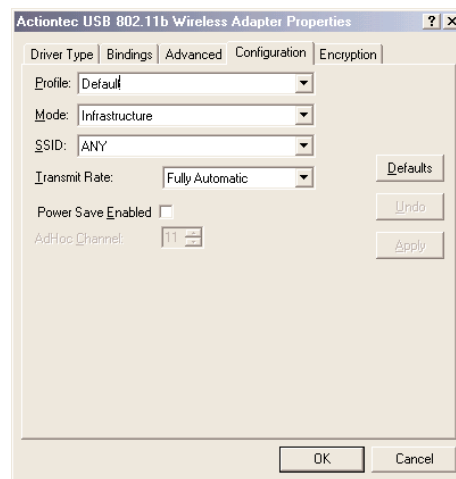

3. The installation is now complete. Please click Finish.




4. It will be necessary for you to shut down your computer. Please click OK to restart your computer. If this screen does not appear please restart your computer manually.

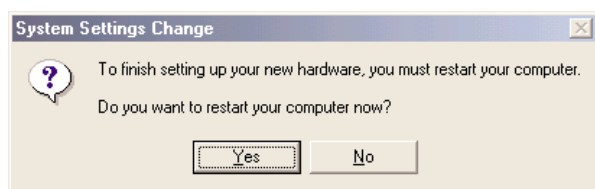


For Windows 2000


1. After you have installed the USB Wireless Adapter your computer will display the "Found New Hardware Wizard" screen. Click Next.

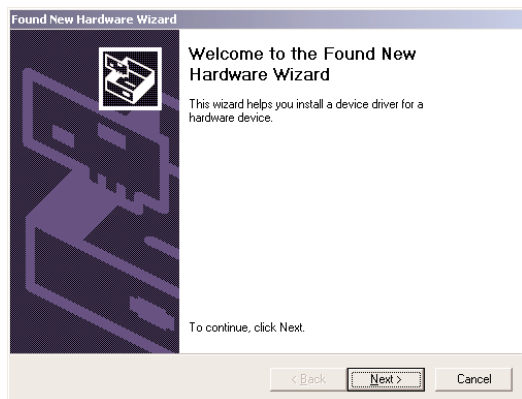

2. In the next screen, select the option Search for the best driver for your device and then click the Next button.

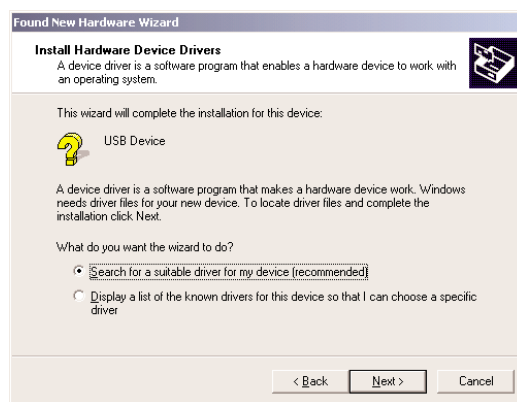


3. Please insert the Actiontec USB Wireless Adapter Installation CD into your CD-ROM drive. Select CD-ROM Drive and then click Next.

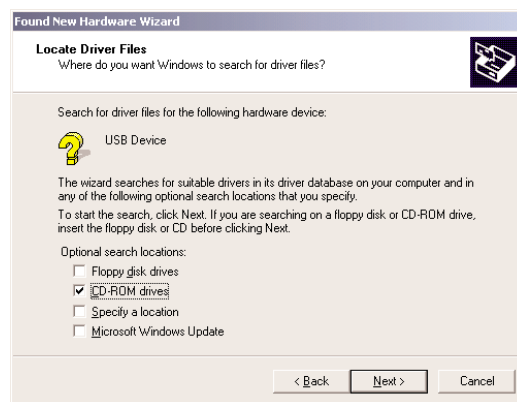


4. Your computer will locate the correct drivers named “AEIWLNIC.inf”. Click Next to install the drivers.



5. The “Wireless LAN Configuration Utility” screen will appear. (Note: The “SSID” must be the same as the “ESSID” on your Home Gateway or Access Point.) Click OK to continue the installation process.

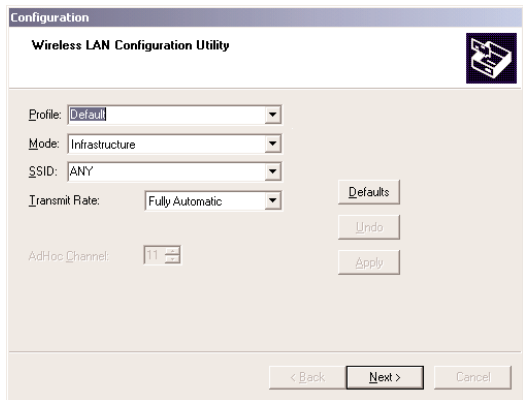

6. If you have configured any Encryption capabilities in your Home Gateway or Access Point then complete the following screen accordingly. Otherwise, please click Finish to complete the installation process.

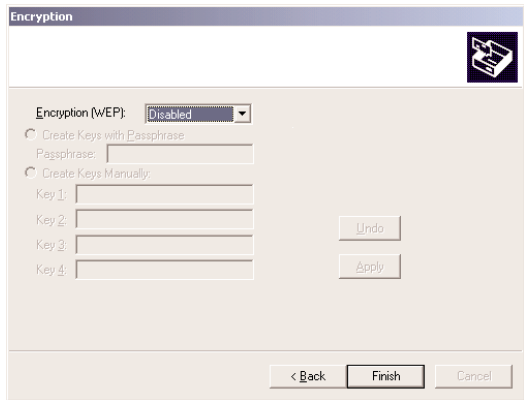


Configuring the Actiontec USB Wireless Adapter

After you have installed the software for the Actiontec USB Wireless Adapter an Icon will appear in your Task Bar on the lower right hand side on your Desktop. You will not be automatically connected to your Home Gateway or Access Point. Follow these steps to configure your Actiontec USB Wireless Adapter.


Actiontec USB Adapter Status Icon



1. Right click on the Actiontec USB Adapter Status Icon. A list will appear as shown in the picture below. Make sure that there is a black dot next to the Turn Wireless Radio On. If the dot is not present then simply select it. Then you want to select the Advanced Configuration... selection from the given list.

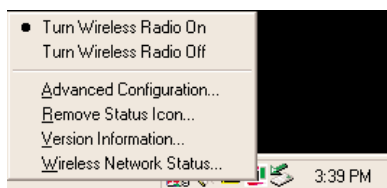

2. The USB Wireless Adapter's Properties screen will appear. Under the "Configuration" tab the SSID value should be the same as the ESSID value of your Home Gateway or Access Point. For example, if you have configured your Home Gateway or Access Point's ESSID value to "ACTIONTEC" then this same value needs to be typed into the SSID field in the following screen.

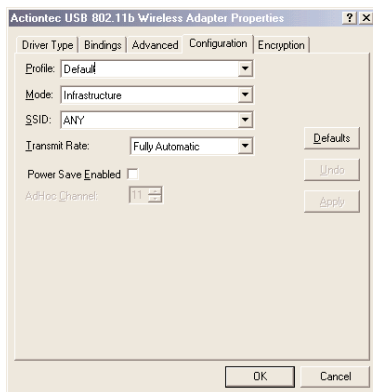


3. After you have entered the appropriate SSID value click Apply and then click OK. Your Actiontec USB Adapter will now be able to connect to your Home Gateway or Access Point. If your Home Gateway or Access Point is connected to a DSL or Cable modem then test your wireless connection. You can do this by opening your Internet Browser and then surf the web.

Note: There are two colored bars on either side of the Actiontec USB Wireless Adapter Icon. When they are Green it means that your wireless connection is strong or good. When they are Yellow it means that your wireless connection is fair. When they are Red it means that your wireless connection is poor or weak. When the bars are Yellow or Red you may experience slower connection speeds then when they are Green.

Encryption (WEP)

You can use Encryption to add a level of security to your USB Wireless Adapter network. This is not a required feature. If you are using a Home Gateway or Access Point you must be sure to use the same Encryption (WEP) keys for your USB Wireless Adapter. Please follow these steps to set this feature up:


1. Right click on the Actiontec USB Adapter Status Icon. A list will appear as shown in the picture on the previous page. Then select Advanced Configuration... from the given list.
2. Click on the Encryption tab.
3. You can either select 64 bit or 128 bit Encryption depending on your needed level of security. You can select Create Keys with Passphrase (a passphrase is the same as a password, with the same type of functionality). Once you have entered a passphrase the utility will automatically generate the 4 keys. Remember, if you are using a Home Gateway or Access Point these keys will need to be added to it. If you already have a set of keys configured into your Home Gateway or Access Point or you prefer to create the keys manually, select Create Keys Manually and enter them in the given fields. Click Apply and then OK to activate your settings.

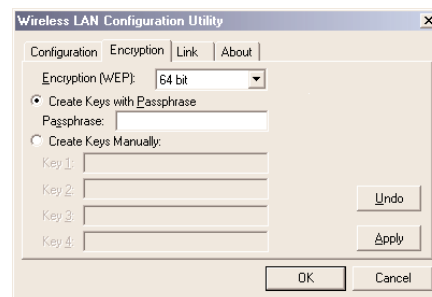


Configuring the AdHoc feature

AdHoc enables two or more computers with the USB Wireless Adapter to talk to each other. The most common usage for this feature is multi-player games in which each player can play the game from each computer against one another via this AdHoc network. If you use the AdHoc feature then a Home Gateway or Access Point is not required. Please follow these steps to set up the AdHoc feature:

1. Right click on the Actiontec USB Adapter Status Icon. A list will appear as shown in the picture below. Then select Advanced Configuration... from the given list.

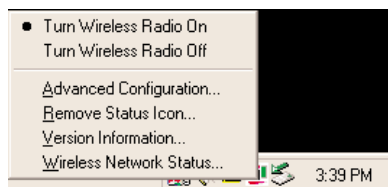

2. In the "Profile" field type in any name you wish. This will save all the settings under that name. Then click on the down arrow in the "Mode" field and select 802.11 AdHoc. Enter an SSID value in the given field. The SSID value should be the same on each computer that you want to network together. Then in the "AdHoc Channel" box select a channel between the numbers 1-11. This value also must be the same on each computer that you wish to network. Finally, click Apply and OK to activate the settings. Be sure to repeat this for each computer you want to network.

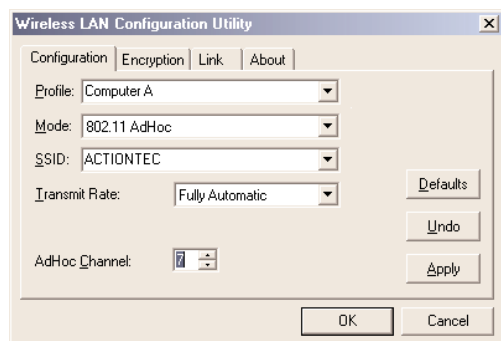


Configuring File and Print Sharing


If you have and are using a Home Gateway or Access Point you can establish a network that will allow you to share files and printers. This is an easy method to set up a network in your home or small office. Please follow these steps to setup file and print sharing:

For Windows 95, 98 and ME


1. On your computer's desktop click Start, then select Settings and then select Control Panel. In the "Control Panel" window double click the Network icon.
2. The following "Network" screen should appear. Click the Add button.

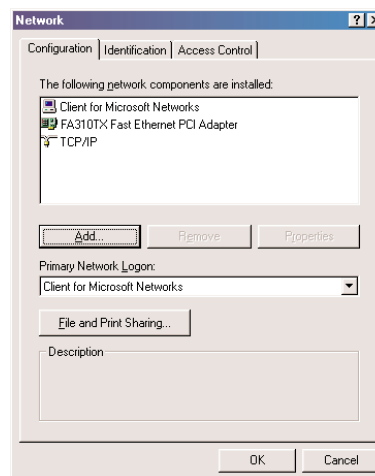


3. In the "Select Network Component Type" screen, click Service and then click the Add button.

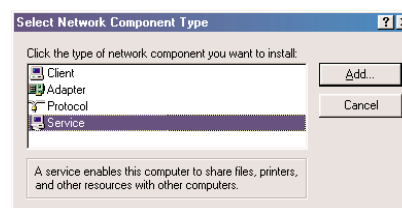


4. In the following screen please select File and printer sharing for Microsoft Networks from the given list.

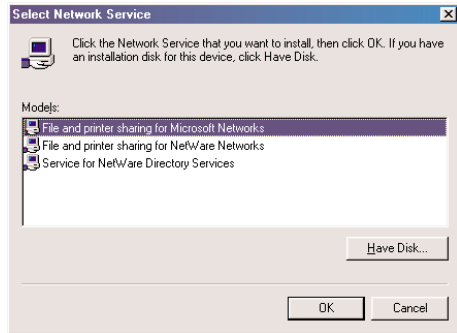


5. In the "File and Print Sharing" screen make sure that both of the selection have a check mark beside them. If they do not please click on the box next to each statement and then click OK.

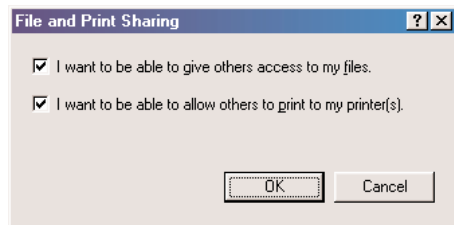


6. After you have clicked OK you will return to the network screen from step 2. Please click on the Identification tab (see the first image on page 26).
 - Computer Name: In this field you can type any name you want. (i.e. My Computer, John, CPU654) Do not use the same name for each computer you wish to have on your network.
 - Workgroup: This field enables you to set a unique name for your network. This name must be set up on every other computer you wish to have on your network.
 - Computer Description: You can enter anything you wish. Traditionally, the location name or main user's name is used in this field.

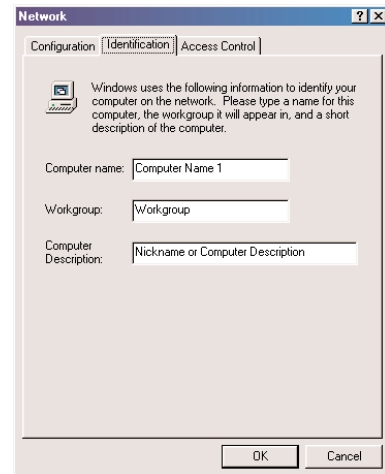


7. Click on the Configuration tab. This will take you back to the screen from step 2. In the "Primary Network Logon:" box, located just above the "File and Print Sharing" button, make sure that Client for Microsoft Networks is selected. If it is not then click the down arrow and select it from the given list. Click OK.
8. A screen will appear asking you to restart your computer. Click Yes to restart the computer. If you do not see this screen please restart your computer manually. After your computer restarts you will be asked to supply a User Name and Password. Enter whatever you would like but be sure to write down these values, as they will enable you to access your network.

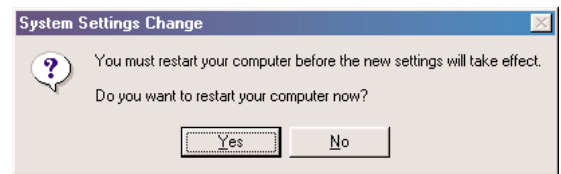

9. After your computer has restarted and you entered a password and user name, you must enable a file or drive for sharing. Locate the file or drive you wish to share. (The easiest way to achieve this is through your Windows Explorer, located in the start menu.) Right click on the File or Drive you wish to share. In the given menu select Sharing.

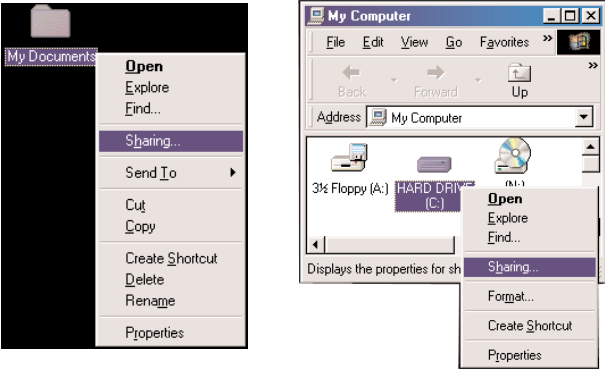

10. The following screen will appear. Please select Shared As. This will enable other users on your network to see the file or drive you selected. Then you can choose the Access Type:

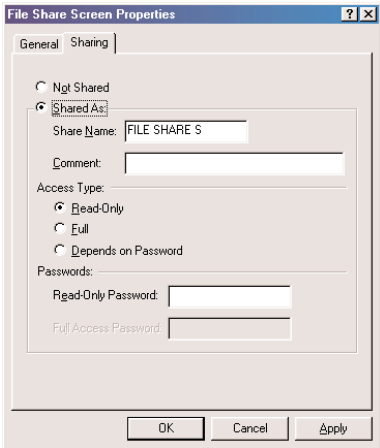


- Read Only: This will allow other users on your network to view and read the file or drive you selected. They will not be able to modify it in any way. You can fur-


ther restrict their privileges by entering a password in the appropriate field.

- Full: This will allow other users on your network to read, modify, move and delete any information in the shared drive or file. You can further restrict their privileges by entering a user name and password.
- Depends on Password: This will allow you to set both Read Only and Full access on the shared file or drive. The level of access will depend on the passwords you enter in the appropriate field.

When you are finished click Apply and then OK.

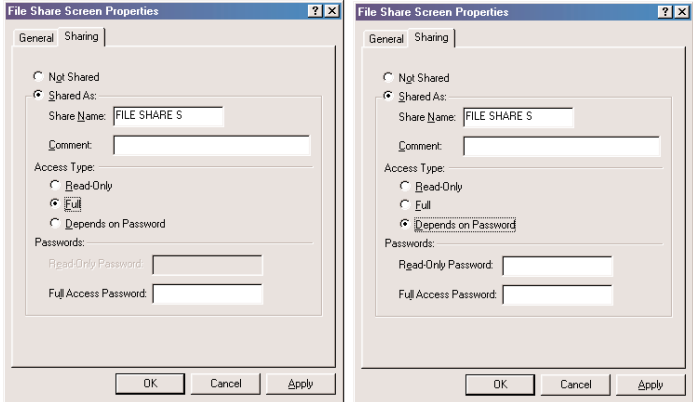


11. Next you need to share your printer. On your desktop, click Start, click Settings, and then select Printers.
12. Right click on the printer you want to share. Select "Sharing" from the given list.

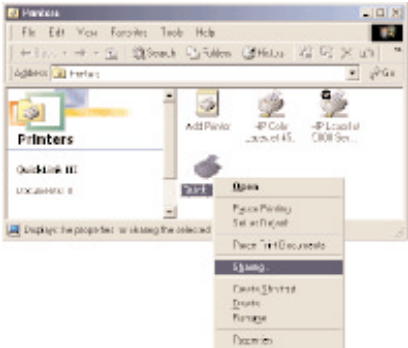


13. The next step will be to enable the sharing by selecting the “Share As” button. It will automatically insert a default name for the Share Name. You may set a password for the printer at this time if you want to restrict who on the network can use this resource. You may also set the default printer settings by modifying information on the other tabs of this window.

For Windows 2000

1. After you have installed and configured your USB Adapter, Windows 2000 will automatically enable file and print sharing for your computer. The only item that needs to be altered is your workgroup settings. All the computers on your network must have the same workgroup name but different computer names. To check or change this locate the “My Computer” icon on your desktop. Right click on it and select Properties from the given list.
2. In the “System Properties” click on the Network Identification tab. If the “Workgroup” name is already the same as all the other computers on your network, then you do not need to change it. Click OK. If it is not the same then click Properties.

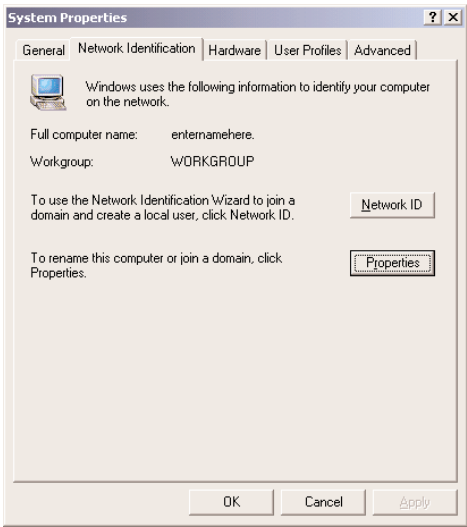

3. In the “Computer Name:” box type a name that is different from your other PC’s on your network. Then, in the “Workgroup” box type the name that you are using to identify your network. This will be the same on each computer on your network. Click OK and you will return to the “Network Properties” screen. Click OK again and even if you are not asked to do so, please restart your computer.

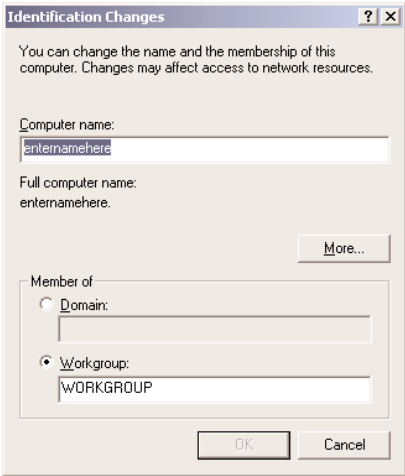

Notes: